


Last modified: 08/02/2022 01:34:27

Cup Holder (Remove and Replace)

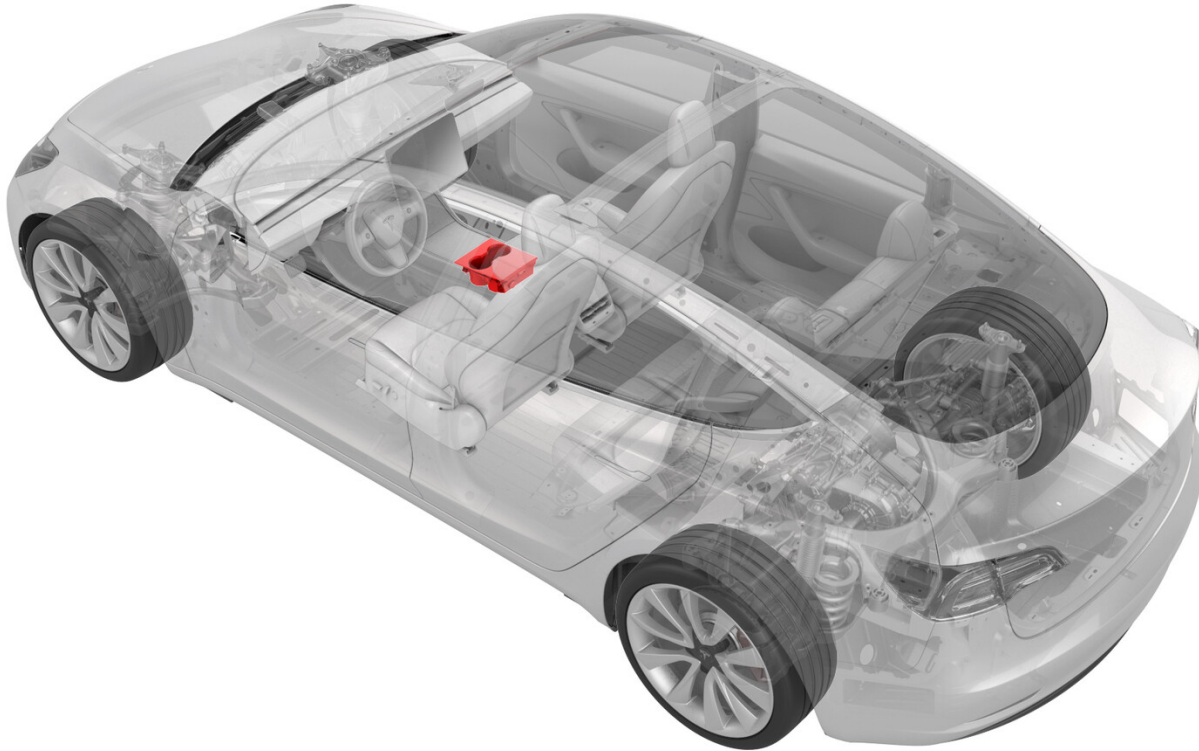

Correction code 15191802

FRT 0.40

NOTE: Unless otherwise explicitly stated in the procedure, the above correction code and FRT reflect all of the work required to perform this procedure, including the linked procedures. **Do not stack correction codes unless explicitly told to do so.**

NOTE: See [Flat Rate Times](#) to learn more about FRTs and how they are created. To provide feedback on FRT values, email LaborTimeFeedback@tesla.com.

NOTE: See [Personal Protection](#) to make sure wearing proper PPE when performing the below procedure.

Correction Codes and FRTs

- Model 3 for Cup Holder (Remove and Replace): 15191802, 0.40
- Model 3 for Cup Holder (2nd Generation) (Remove and Replace): 151918120.30



NOTE: Unless otherwise explicitly stated in the procedure, the above correction code and FRT reflect all of the work required to perform this procedure, including the linked procedures. **Do not stack correction codes unless explicitly told to do so.** **NOTE:** See [Flat Rate Times](#) to learn more about FRTs and how they are created. To provide feedback on FRT values, email LaborTimeFeedback@tesla.com. **NOTE:** See [Personal Protection](#) to make sure wearing proper PPE when performing the below procedure.

Torque Specifications


Table 1. Torque Specifications: [Cup Holder \(Remove and Replace\)](#)

Description	Torque Value	Recommended Tools	Reuse/Replace	Notes
Screws that attach the cup holder lower assembly to the center console	 1.1 Nm (.8 lbs-ft)	<ul style="list-style-type: none">• Torx T20 socket• 4 in extension	Reuse	
Screw that attaches the armrest latch grommet to the cup holder	 1.6 Nm (1.2 lbs-ft)	<ul style="list-style-type: none">• Torx T15 socket• 2 in extension	Reuse	


Remove

1. Disconnect 12V power. See [12V/LV Power \(Disconnect and Connect\)](#)  .
2. Remove the center console decor trim. See [Decor Trim - Center Console - LH \(Remove and Replace\)](#)  .
3. Remove the screws and release the tabs that attach LH and RH bright strips to the center console, and then remove the strips from the console.


 **1.6 Nm (1.2 lbs-ft)**

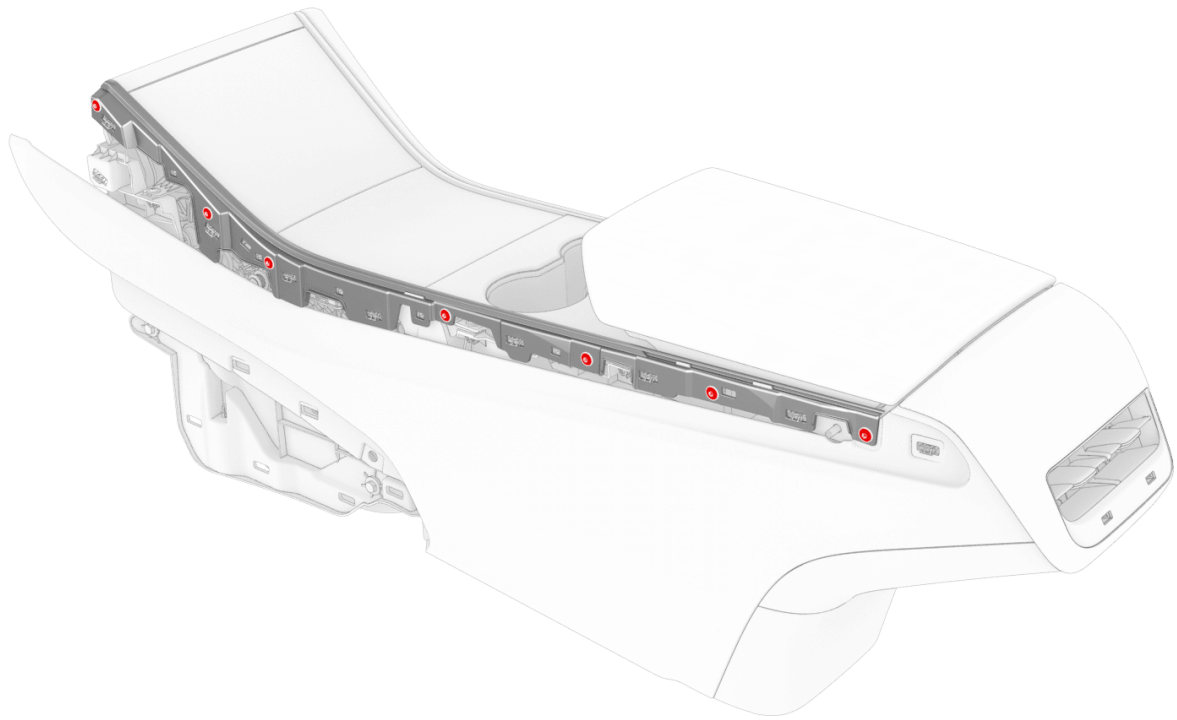


4. Open the armrest.
5. Release the clips that attach the cupholder decor trim to the cupholder assembly, and then separate the trim from the center console assembly.

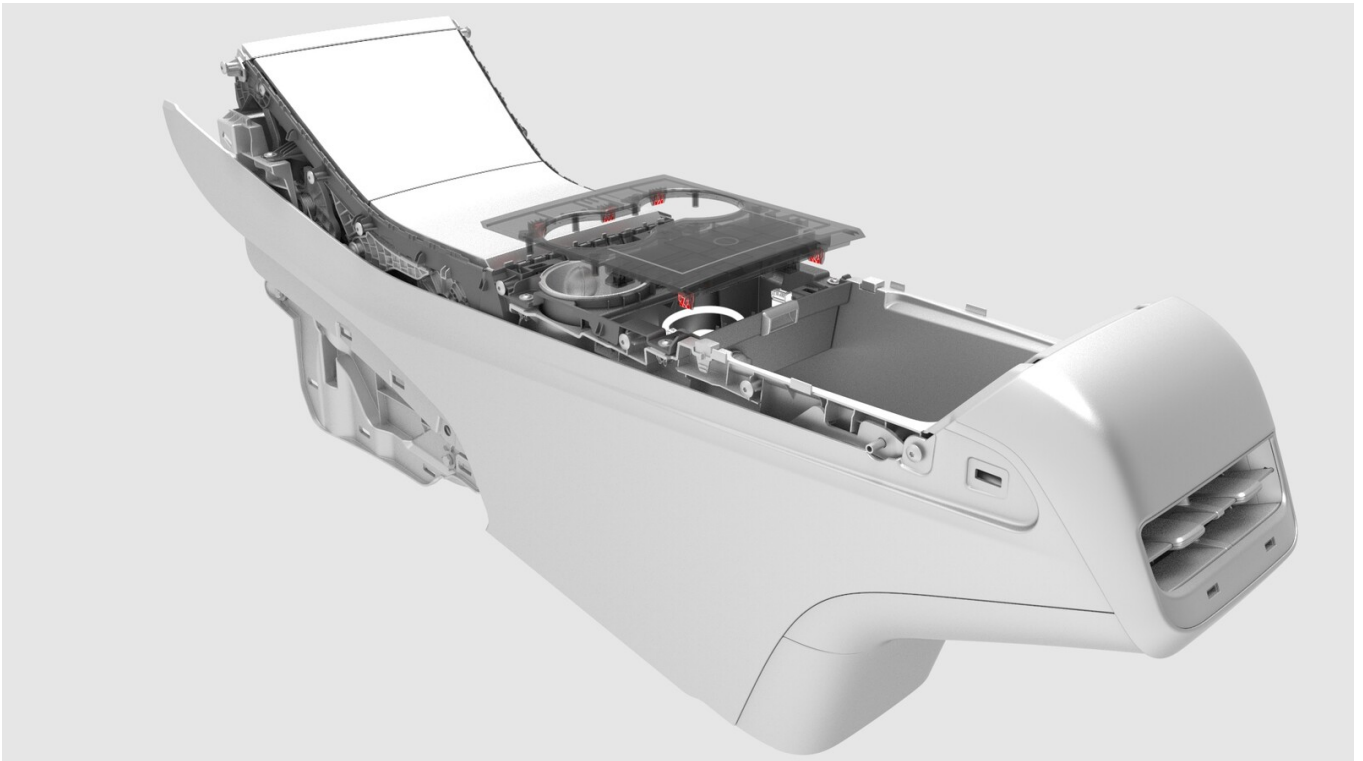


6. Disconnect the electrical harness from the security body controller module connector, and then remove the trim from the vehicle.

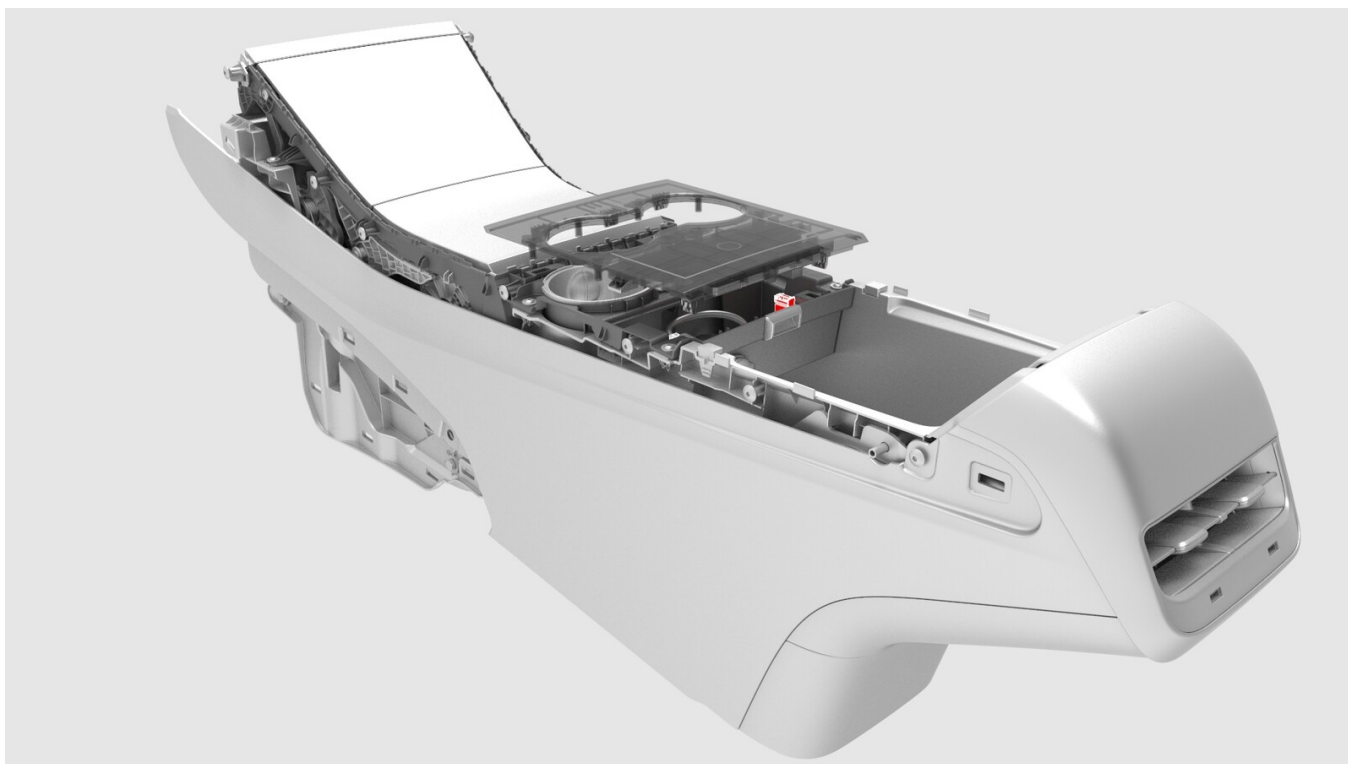


7. Disconnect the electrical harness from the center console power socket connector.

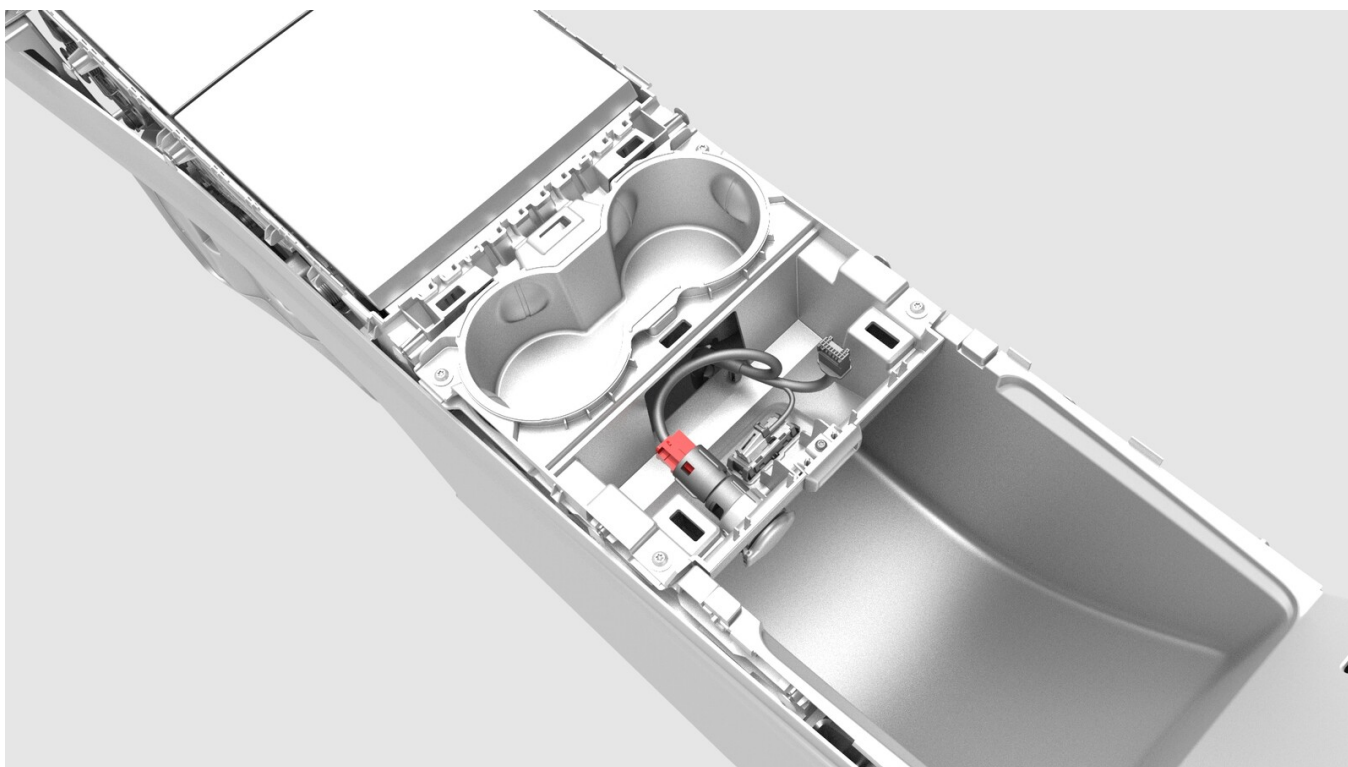


8. Disconnect the electrical harness from the center console puddle light connector.

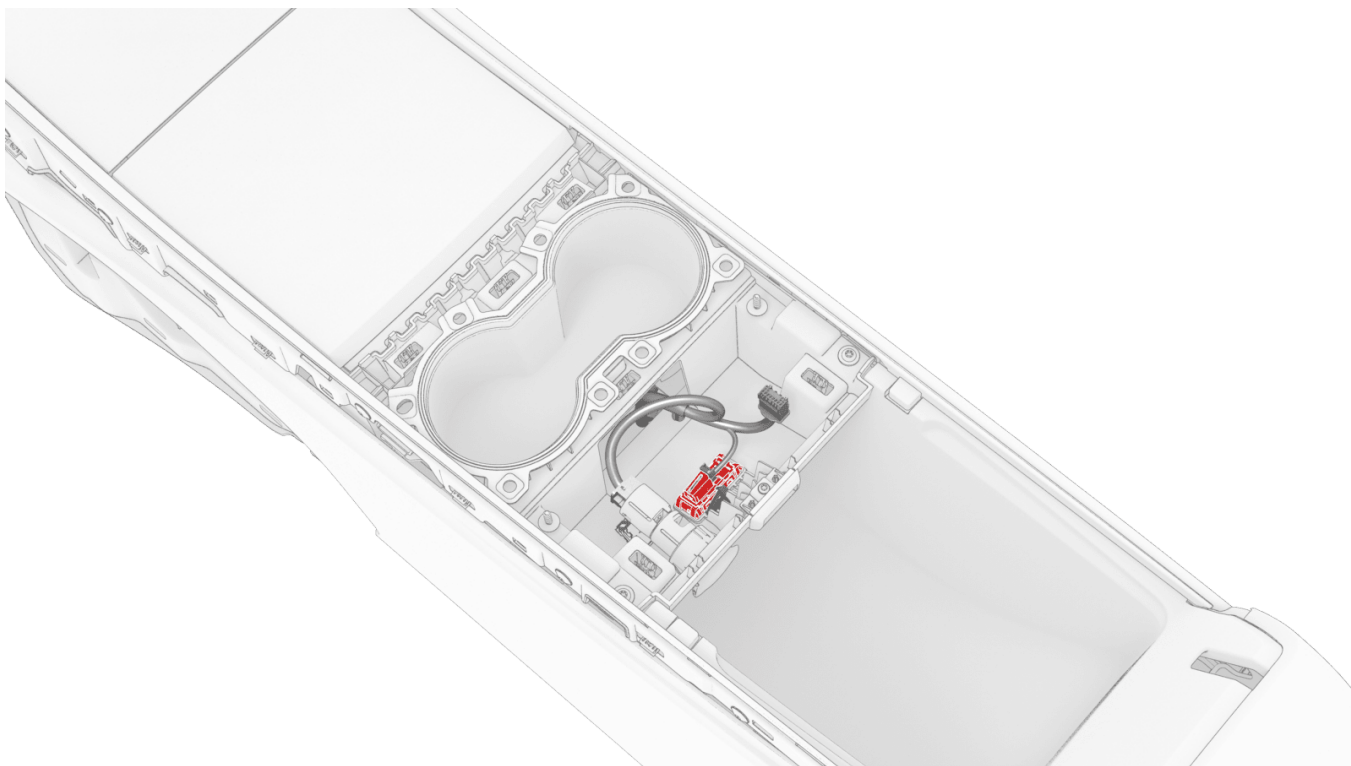


- 9.** Release the small tabs on the spring cap and slide the power socket inside the cap, so that the openings in the side of the socket align with the large tabs of the cap.

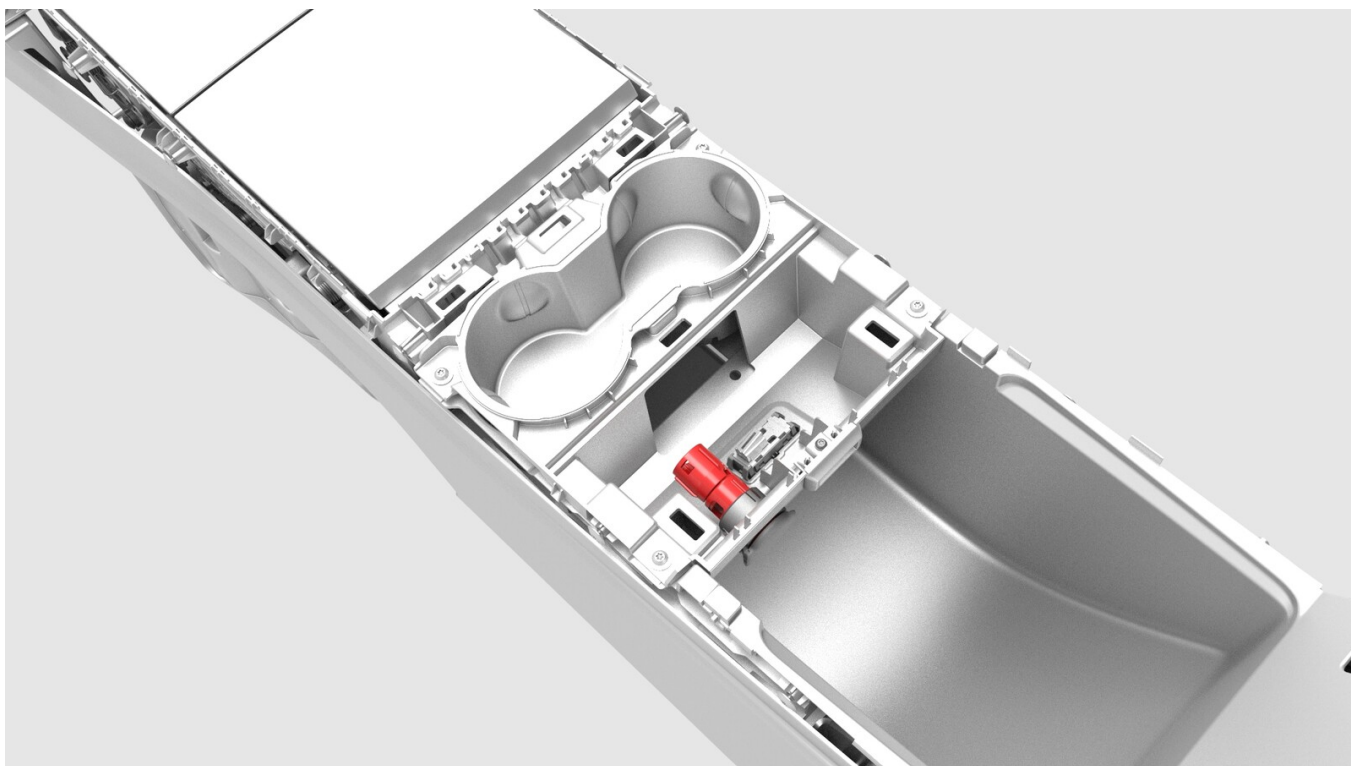


- 10.** Release the tabs of the cap and move the power socket and cap together out through the cup holder assembly.

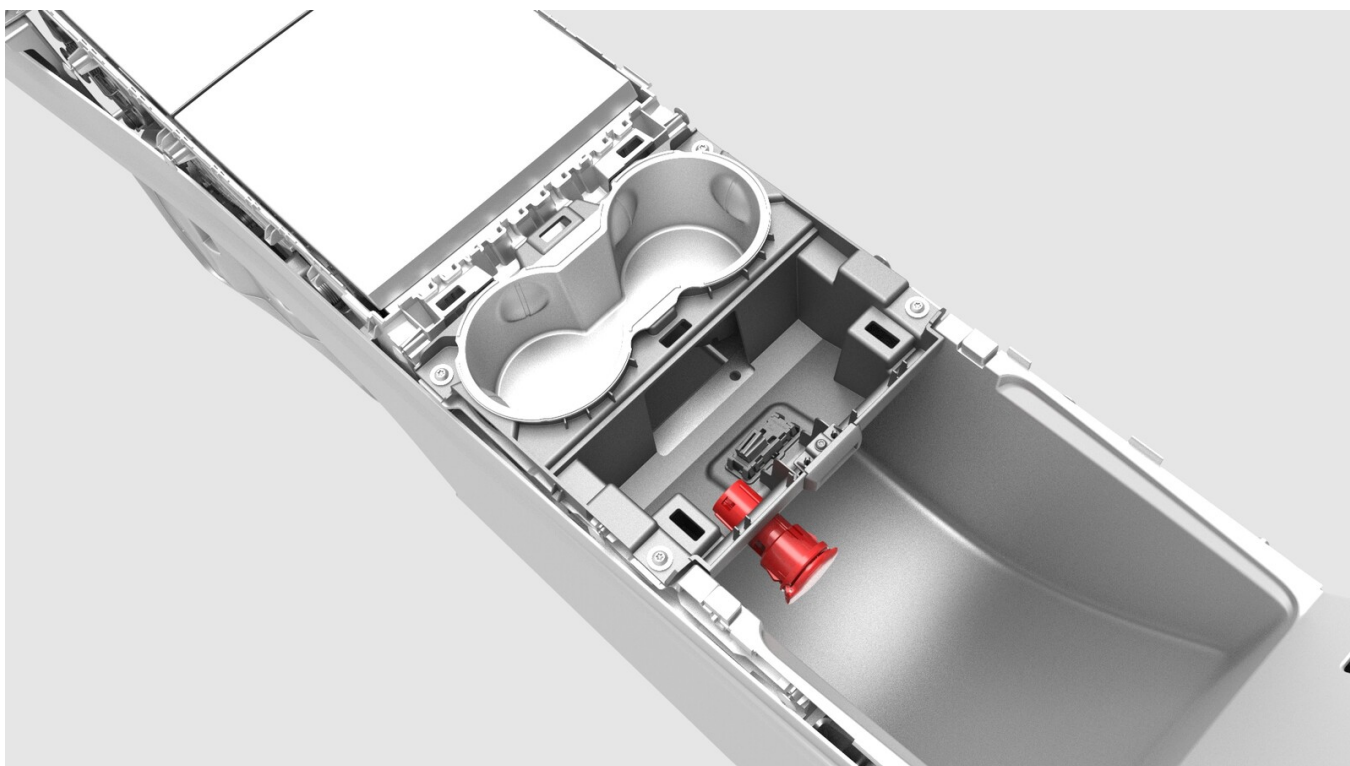

- 11.** Release the clips that attach the puddle light to the cup holder, and then remove the puddle light from the cup holder.

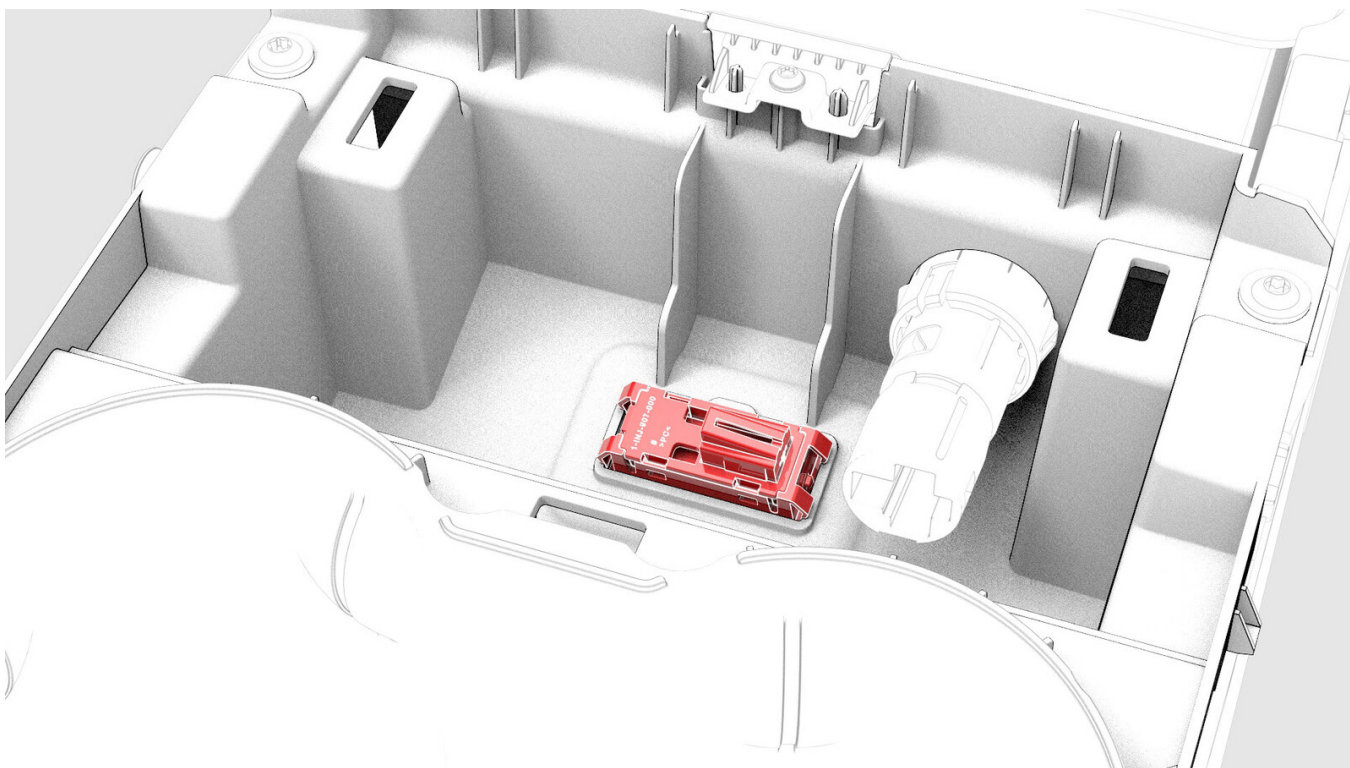


- 12.** Use a plastic trim tool to remove the cup holder liner from the cup holder.

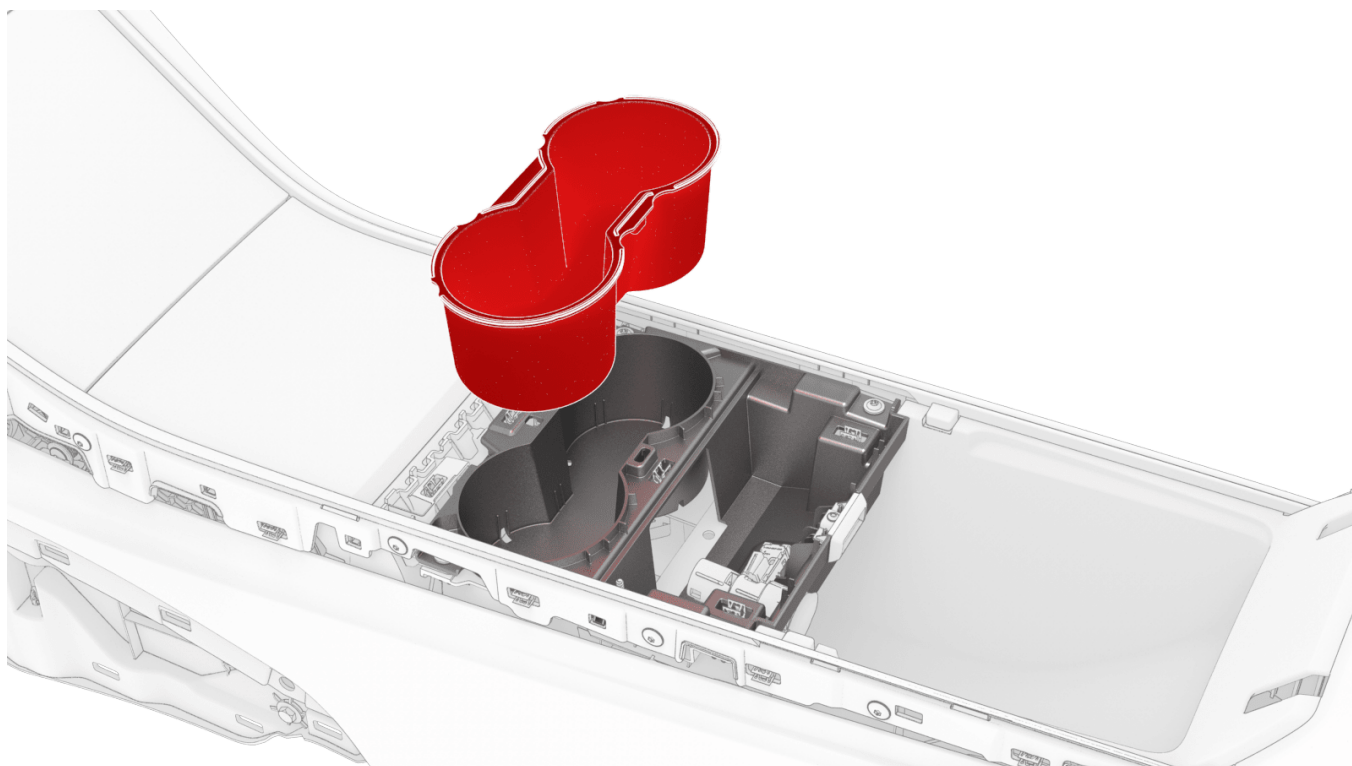


13. Remove the screw that attaches the armrest latch grommet to the cup holder.

 **1.6 Nm (1.2 lbs-ft)**

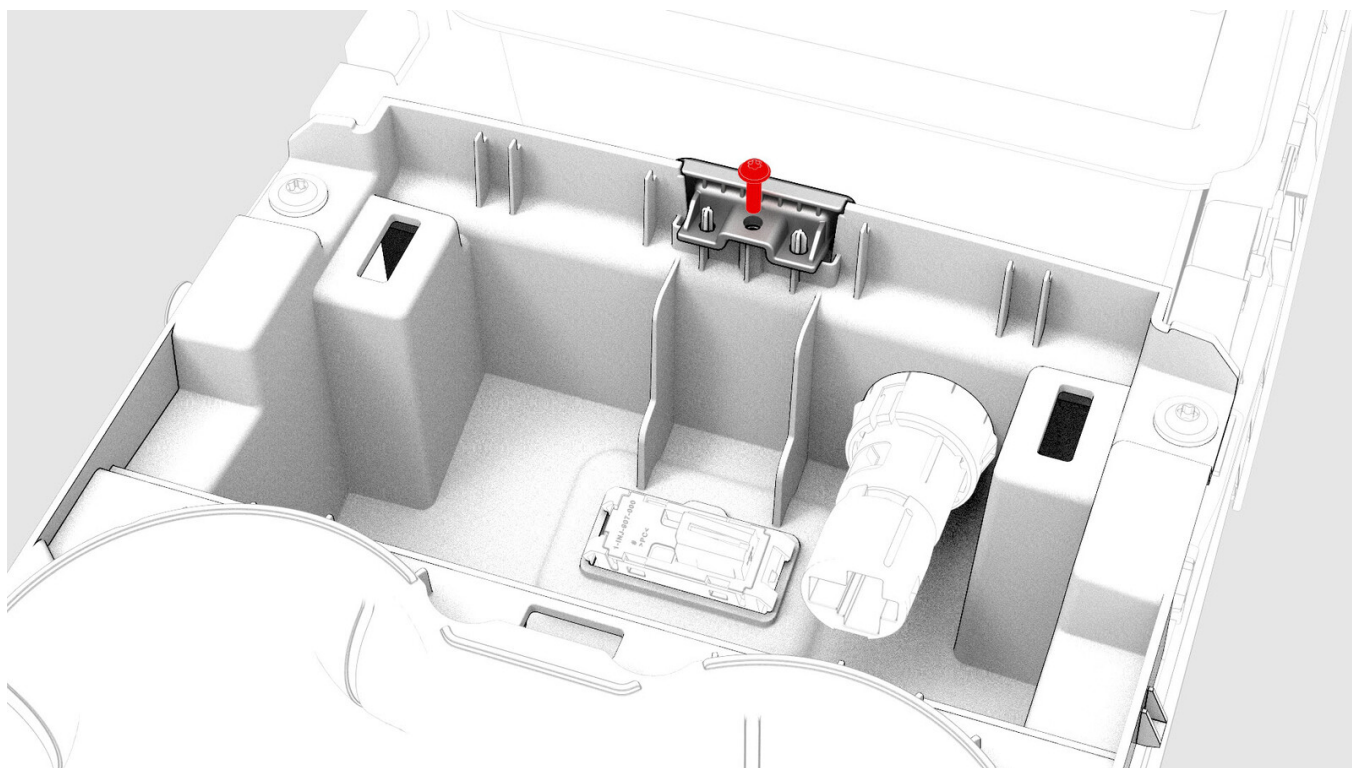

14. Remove the screws that attach the cup holder lower assembly to the center console, and remove the cup holder from the vehicle.

 **1.1 Nm (.8 lbs-ft)**

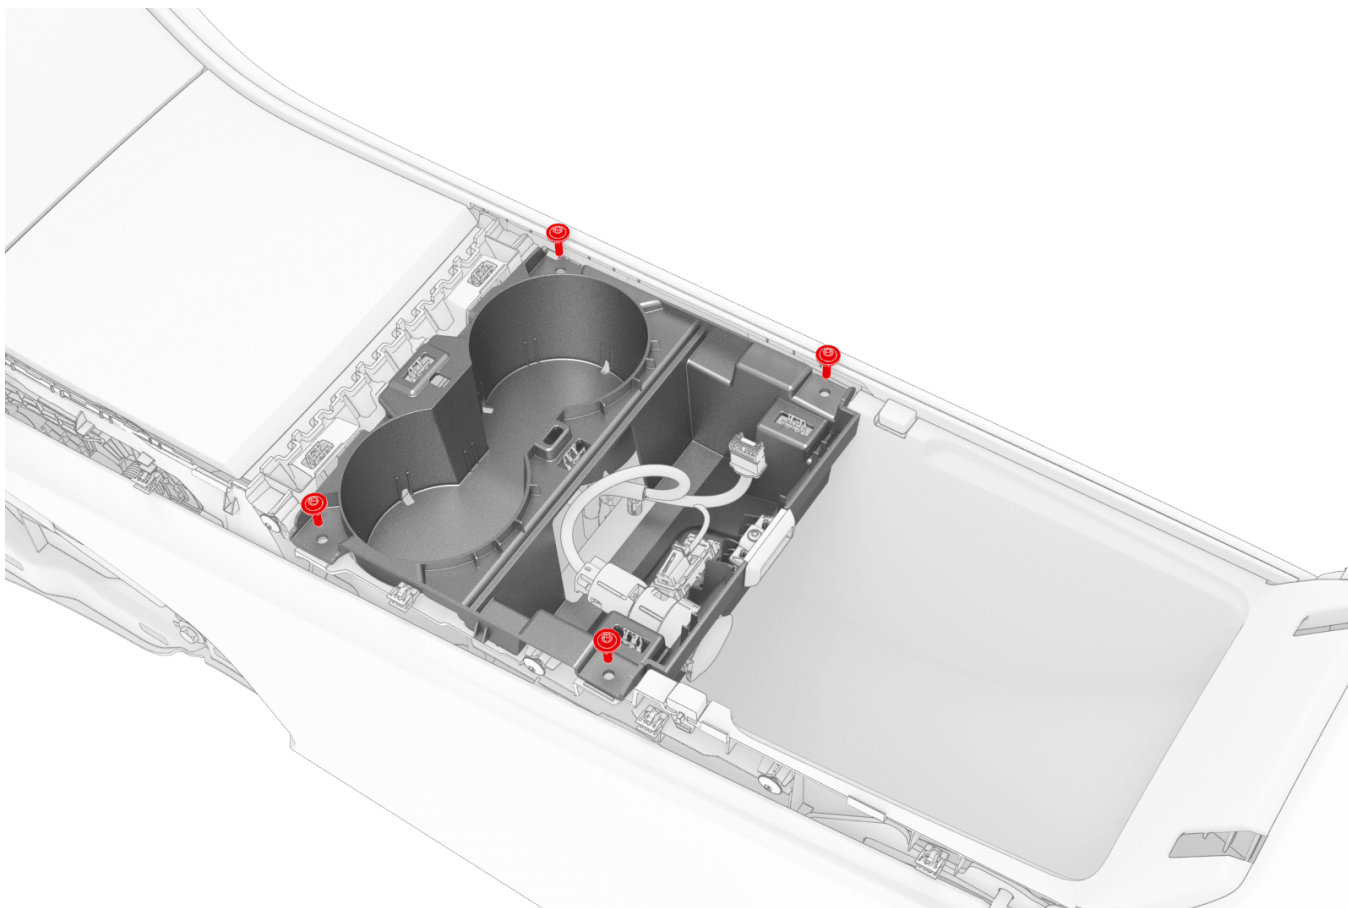

Install

Installation procedure is the reverse of removal.